



Start Of Configuration

Appendix 4: Full ASCII Code 39 Table

Code 39	ASCII	Hexa-code	Code 39	ASCII	Hexa-code
	Full ASCII ---NUL	00		Full ASCII ---SI Function key-----"Shift"	0F
	Full ASCII ---SOH Function key-----"Ins"	01		Full ASCII ---DLE Function key-----"5(num)"	10
	Full ASCII ---STX Function key-----"Del"	02		Full ASCII ---DC1 Function key-----"F1"	11
	Full ASCII ---ETX Function key-----"Home"	03		Full ASCII ---DC2 Function key-----"F2"	12
	Full ASCII ---EOT Function key-----"End"	04		Full ASCII ---DC3 Function key-----"F3"	13
	Full ASCII ---ENQ Function key-----"Up arrow"	05		Full ASCII ---DC4 Function key-----"F4"	14
	Full ASCII ---ACK Function key-----"Down arrow"	06		Full ASCII ---NAK Function key-----"F5"	15
	Full ASCII ---BEL Function key-----"Left arrow"	07		Full ASCII ---SYN Function key-----"F6"	16
	Full ASCII ---BS Function key-----"Backspace"	08		Full ASCII ---ETB Function key-----"F7"	17
	Full ASCII ---HT Function key-----"TAB"	09		Full ASCII ---CAN Function key-----"F8"	18
	Full ASCII ---LF Function key-----"Enter (alpha numeric)"	0A		Full ASCII ---EN Function key-----"F9"	19
	Full ASCII ---VT Function key-----"right arrow"	0B		Full ASCII ---SUB Function key-----"F10"	1A
	Full ASCII ---FF Function key-----"PgUp"	0C		Full ASCII ---ESC Function key-----"F11"	1B
	Full ASCII ---CR Function key----- "Enetr(num.)"	0D		Full ASCII ---FS Function key-----"F12"	1C
	Full ASCII ---SO Function key-----"PgDn"	0E		Full ASCII ---GS Function key-----"ESC"	1D



End Of Configuration



Start Of Configuration

2. Header and Trailer

Barcode Value	Barcode Label	Description
CP11		Add code length as header enable (2 digits)
CP12		Add code length as header disable (2 digits)
HT01		Header (Preamble)
HT02		Trailer (Postamble)
HT03		Truncate header character
HT04		Truncate trailer character
SET		Confirm to save this setting (required for reading full ASCII table and length setting)



End Of Configuration



Start Of Configuration

Keyboard Setting

Barcode Value	Barcode Label	Description
CP00		Capital lock on
CP01		Capital lock off
CP05		Function key emulation enable
CP06		Function key emulation disable
CP18		Send number as normal data
CP19		Send number as keypad data
CP20		Alphabet follow as keyboard
CP21		Alphabet always upper case
CP22		Alphabet always Lower case

Message Terminator

Barcode Value	Barcode Label	Description
DT01		Keyboard terminator---none
DT02		Keyboard terminator---Enter
DT03		Keyboard terminator---H-TAB



End Of Configuration