





Smart-2 Multi Functional Wireless Weighing Indicator

User Manual



TABLE OF CONTENTS

LEGAL WARNING	∠
GENERAL DETAILS	
MOUNTING METHODS	6
INDICATORS	
INDICATOR CONNECTIONS	
MENU SYSTEM	8
DEVICE IDENTITY INFORMATION	10
DISPLAYING THE SERIAL NUMBER	10
DISPLAYING THE VERSION DETAILS	10
DISPLAY SETTINGS:	11
SETTING THE POINT LOCATION	11
INCREMENT STEP SETTING	12
WEIGHING CAPACITY SETTING	13
UNIT OF MEASUREMENT SETTING	14
CONFIGURATION SETTINGS	15
DISPLAY LIGHT SETTING	15
AVERAGE SETTING	16
WEIGHT CHANGE SPEED	17
ECO MODE SETTING	18
GAIN SETTING	19
DISPLAY BRIGHTNESS SETTING	20
MEASUREMENT STABILITY	21
WEIGHT CALIBRATION	22
ZERO CALIBRATION	22
LOAD CALIBRATION	23
RELAY SETTINGS	24
RELAY 1 SETTINGS	25
RELAY 1 SET VALUE SETTING	25
RELAY 1 SET DIRECTION SETTING	26
RELAY 1 SET HYSTERESIS SETTING	27
RELAY 1 DELAY TIME SETTING	28
RELAY 2 SETTINGS	29
ANALOG OUTPUT (DAC) SETTINGS	30
ANALOG OUTPUT CALIBRATION	30
DAC LOWEST OUTPUT VALUE (LVAL) SETTING	31





DAC HIGHEST OUTPUT VALUE (HVAL) SETTING	32
DAC MAXIMUM OUTPUT (DMAX) VALUE SETTING	33
COMMUNICATION SETTINGS	34
COMMUNICATION MODE SETTING	34
INDICATOR ADDRESS (SCALE IDENTITY NO) SETTING	35
COMMUNICATION PARITY BIT SETTING	36
COMMUNICATION SPEED (BAUD RATE) SETTING.	37
COMMUNICATION DATA LENGTH SETTING	38
POINT-TO-POINT COMMUNICATION SETTING.	39
BLUETOOTH SETTINGS	41
BLUETOOTH STATUS SETTING	41
BLUETOOTH ID SETTING	42
WIFI SETTINGS	43
WIFI STATUS SETTING	43
WIFI MODE SETTING	44
WIFI Access Point ID SETTING	45
WIFI Station ID SETTING	46
WIFI Name SETTING	47
TEMPERATURE CALIBRATION SETTINGS	48
RESTORING FACTORY SETTINGS.	49
PERFORMING TARING WITH key	
RESETTING DISPLAY VALUE WITH KEY	
CONNECTIONS AND MODE SELECTIONS	
CALIBRATION SWITCH (P2)	
ANALOG OUTPUT mode selection	
.0-5V analog output connection	
4-20mA analog output connection	
ANDROID APPLICATION SETTINGS	
CONNECTION WITH WIFI MODULE	
CONNECTION WITH BLUETOOTH MODULE	
MAKING DEVICE SETTINGS	
Display Settings	
Configuration Settings	
Relay Settings	58





59
.59
61
63
.64





LEGAL WARNING

We congratulate you on the good choice you made. ESIT SMART-2 indicators are Esit's simplest weight indicators which are specially designed in line with your weight measurement needs.

SMART-2 is an ideal device with its features for the weighing sector with its unique durable construction and the unusually small dimensions Like the ESIT's other indicators, SMART-2 is manufactured to provide the most advanced quality standards.

This user guide is prepared to introduce features of SMART-2 to our valuable users and help you get the most out of your device.

For more information and technical support, please visit www.esit.com.tr ..





GENERAL DETAILS



Loadcell Cable Input Power, Communication, Relay, DAC Cables

key Function

Switch on / off the device

Going one level up in the menu and resetting while in the weight display

Access to menu

Menu selection, confirmation and taring while in the weight display

ESİT



MOUNTING METHODS

Rail Mounting Apparatus (inside cabinet or wall mounting)





Panel Mounting Apparatus (Front panel mounting)





ESİT



INDICATORS

<u>Inactivity:</u> The display value indicates that inactivity has been detected within ±2e range for 2 seconds and kg segment is highlighted on the display. (e: increment step on the display)



<u>Absolute zero:</u> Indicates that display value is 0 and internal counting value is less than **1/4e**.



Net: Indicates taring operation is in progress



Minus: Indicates that the display value is negative.



INDICATOR CONNECTIONS

In the printed circuit of the indicator, the connections are as follows provided that the leftmost terminal slot is number 1. See 'Connection and mode selection' section for more details.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
-LC 1 input	+LC 1 input	-LCFeed	+LCFeed	LCGround	OV GND	+V (6-24V)	oj-	oj+	0/1+	GNĐ	DI2	DI1	RL 2/1	RL 2/2	RL 1/1	RL 1/2	RS485VCC	Rx / B	Tx / A	RS485GND

ESİT



MENU SYSTEM

To access the menu system and navigate menus, press the 💂 button

IDENTITY MENU: This is the menu for displaying the serial number and version information of the indicator.



DISPLAY SETTINGS MENU: This is the menu where the increment step (e), point location, weighing capacity value and unit of measurement are set.



CONFIGURATION MENU: This is the menu where background light setting, brightness, average filter size, eco mode, weight change response speed, weight tracking and ADC gain value settings are made.



CALIBRATION MENU: This is the menu where zero and load calibrations are made.



OUT 1 (RELAY # 1) MENU: This is the menu where set value, hysteresis, delay time and contact position setting for relay 1 are performed.



OUT 2 (RELAY # 2) MENU: This is the menu where set value, hysteresis, delay time and contact position setting for relay 2 are performed.



ANALOG OUTPUT (DAC) MENU: This is the menu for setting lower and upper values and the display values corresponding to the lower value for the analogue output.



COMMUNICATION SETTINGS MENU:

This is the menu where the communication mode, speed and data format settings are made.







BLUETOOTH MENU: This is the menu for making the name setting and on/off setting of the Bluetooth Low Energy module. The module becomes active when it is connected to the device.



WIFI MENU: This is the menu for making the name setting and on/off setting of the WiFi module. The module becomes active when it is connected to the device.



TEMPERATURE CALIBRATION MENU: This is the calibration menu for temperature compensation.



RESET MENU: It is used to restore the factory settings.








DEVICE IDENTITY INFORMATION

It is possible to display the serial number and version information of the indicator with this menu.

DISPLAYING THE SERIAL NUMBER





- 2. Press the key to confirm the menu
- 3. The first option is the 'Serial number' menu.



- 4. Press the key to confirm the menu
- 5. The value displayed on the screen is the serial number of the indicator
- 6. Press the key to go back to the measurement screen.

DISPLAYING THE VERSION DETAILS

7. Press key until you reach the 'Device identity information menu



- 8. Press the key to confirm the menu
- 9. Press key until you reach the 'Version Details' menu



- 10. Press the Key to confirm the menu
- 11. The value displayed on the screen is the version details of the indicator
- 12. Press the key to go back to the measurement screen.



DISPLAY SETTINGS:

WARNING: In order for these menu functions to be active, the P2 connection inside the indicator must be open circuit; otherwise only recorded information will be displayed and they are not allowed to be changed. In this case, a special error code (Error50) will also be displayed on the indicator's screen.

SETTING THE POINT LOCATION

If a decimal representation of the screen resolution is required, the decimal point is set with this menu.

(1) Press key until you reach the 'Display Settings' menu



- (2) Press the **EXTER** key to confirm the menu
- (3) The first option is the 'Decimal point' menu.
- (4) Press the key to confirm the menu
- (5) Set the decimal point as you desire with menu key.

then



if



then



if



then



if



then



- (6) Press the key to save the changes.
- (7) Press the key to go back to the measurement screen.





INCREMENT STEP SETTING

(1) Press key until you reach the 'Display Settings' menu



- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Increment Step' menu



- (4) Press the key to confirm the menu
- (5) Set the increment step as you desire with menu key.



then e = 1



then e = 2



then e = 5



then e = 10



then e = 20



then e = 50

- (6) Press the key to save the changes.
- (7) Press the key to go back to the measurement screen.



if

if


if

if



WEIGHING CAPACITY SETTING

This value is the maximum measurement value allowed to be displayed on the screen. The indicator displays an error code if there is a load that exceeds $MAX \square$ (9e) value on the platform.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Weighing capacity' menu



- (4) Press the key to confirm the menu
- (5) The last recorded weighing capacity will be displayed on the screen and the ten thousands digit blinks at the same time




- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with
- (7) Press the key to save the weighing capacity.
- (8) Press the key to go back to the measurement screen.

ESIT



UNIT OF MEASUREMENT SETTING

This value allows you to select the unit of measurement made. Kg, g, lb, ° C, degrees, mV / V, mV and V units can be selected.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Unit Settings' menu



- (4) Press the key to confirm the menu
- (5) The last used unit will be displayed on the screen and the unit option on the right of the screen will also be active at the same time.



- (6) Press key until the unit you'd like to use is displayed on the screen.
- (7) Press the key to save the unit setting.
- (8) Press the key to go back to the measurement screen.

ESIT



CONFIGURATION SETTINGS

DISPLAY LIGHT SETTING

You can adjust the display light in this menu. In addition to the continuous on and off options, you can also set the auto light on when the weight value changes by $\pm 5e$.

(1) Press key until you reach the 'Configuration Settings' menu



- (2) Press the key to confirm the menu
- (3) The first option is the 'Display light' menu.



- (4) Press the **ENTER** key to confirm the menu
- (5) Press 'ON' button to turn on, 'OFF' button to turn off the display light and key until the 'Auto' screen is displayed for the auto mode.



- (6) Press the key to save the display light setting.
- (7) Press the key to go back to the measurement screen.



AVERAGE SETTING

With this value, the number of measurements to be averaged when the measurement value is displayed on the screen is set. The high average value increases the measurement quality while the response to small changes is reduced.

(1) Press key until you reach the 'Configuration Settings' menu



- (2)Press the key to confirm the menu
- Press key until you reach the 'Average' (3)menu



- Press the key to confirm the menu (4)
- Set the increment step as you desire with menu key. (5)

if if average with 5 measurements then if then average with 10 measurements if if

single measurement display

then average with 20 measurements

then average with 50 measurements

- Press the **ENTER** key to save the changes. (6)
- key to go back to the measurement screen. (7)





WEIGHT CHANGE SPEED

With this menu (SPEED), the speed of change when new weight is added, is adjusted

It is 0.2 sec when FAST, 0.5 sec with MED, 1.0 sec with SLOW. The measurements in the SLOW mode are more stable.

(1) Press key until you reach the 'Configuration Settings' menu



- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'SPEED' menu



- (4) Press the key to confirm the menu
- (6) Set the speed mode of your choice with menu key.



then 0.2 sec



then 0.5 sec



then 1.0 sec.

- (6) Press the key to save the changes.
- (7) Press the key to go back to the measurement screen.



ECO MODE SETTING

With this menu you can turn eco mode on or off. If the measurement value is within ± **10e** range around 0 for 10 minutes while Eco mode is on, the indicator goes into eco mode and automatically switches off the display, backlight, wifi and relays. To exit the eco mode, either weigh a weight outside the ± **10e** range of or press the buttons other than the off key.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Eco Mode' menu



- (4) Press the key to confirm the menu
- (5) Press key until reaching 'ON' for activating and 'OFF' for deactivating the Eco Mode



- (6) Press the key to save the changes.
- (7) Press the key to go back to the measurement screen.



GAIN SETTING

With this value, you can choose the internal upgrade value of the ADC. This value can be 128 or 64. 128 must be selected for load cells up to 3mV/V and 64 must be selected for higher ones

(up to 6mV/V) Once the gain value has been changed, **calibration must be performed** to ensure proper measurement.

WARNING: In order for these menu functions to be active, the P2 connection inside the indicator must be open circuit; otherwise only recorded information will be displayed and they are not allowed to be changed. In this case, a special error code will also be displayed on the indicator's screen.

(1) Press key until you reach the 'Configuration Settings' menu




- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Gain' menu



- (4) Press the key to confirm the menu
- (5) Set the gain value as you desire with menu key.



then gain 128



- (6) Press the key to save the changes.
- (7) Press the key to go back to the measurement screen.



DISPLAY BRIGHTNESS SETTING

With this value you can change the backlight brightness. Higher values consume more energy.

(1) Press key until you reach the 'Configuration Settings' menu



- (2) Press the key to confirm the menu
- (3) Press key until you reach the "Display Brightness" menu.



- (4) Press the key to confirm the menu
- (5) Set the display brightness as you desire with menu key.



- (6) Press the key to save the changes.
- (7) Press the key to go back to the measurement screen.



MEASUREMENT STABILITY

When this menu option is on, any change that is les than 2e for 2 sec after the measurement is stabile, is not displayed

(1) Press key until you reach the 'Average' menu



(2) Press the key to confirm the menu

(3) Press key until you reach the 'TRACK' menu



(4) Press the key to confirm the menu

(5) Set the position as you desire with menu key.



then active



then passive

- (6) Press the **ENTER** key to save the changes.
- (7) Press the key to go back to the measurement screen.



WEIGHT CALIBRATION

WARNING: In order for these menu functions to be active, the P2 connection inside the indicator must be open circuit; otherwise an error code special for this situation is displayed on the indicator's screen.

ZERO CALIBRATION

(1) Press key until you reach the 'Calibration' menu



- (2) Press the key to confirm the menu
- (3) The 'Zero Calibration' menu flashes for a short time and the internal count value information starts to be displayed on the screen. When this internal count value is



displayed, the CAL segment at the bottom left of the screen flashes

- (4) After the platform is emptied, zero calibration is performed with the key.
- (5) When zero calibration is done, the indicator automatically switches to the 'Load calibration' menu (Load). This screen information flashes for a short time and the



- display shows the internal count value after the reset and the CAL segment at the bottom left of the screen is lit continuously
- When this internal count value is displayed, the reset operation can be performed with the key. Press the normal operation (measurement) screen.

ESİT



LOAD CALIBRATION

(1) Press key until you reach the 'Calibration' menu



- (2) Press the key to confirm the menu
- (3) The 'Load Calibration (Load)' menu flashes for a short time and the internal count value information starts to be displayed on the screen. When this internal count value is displayed, the CAL segment at the bottom left of the screen does not flash like it does in zero calibration
- When this internal count value is displayed, the reset operation can be performed with the key. When reference weight is placed on the platform and stability of the platform is ensured, key must be pressed.

NOTE: IT IS RECOMMENDED THAT THE REFERENCE WEIGHT IS AT LEAST HALF OF THE LOADCELL CAPACITY

After this operation the ten thousands digit blinks. Numeric value of the blinking digit can be increased with key. The place value can be changes with key.



- (6) Once the desired value is displayed on the screen, the key must be pressed to complete the calibration and record the value.
- (7) The 'CALok' message indicating that the calibration is successful will appear and the device will start to operate according to the calibration performed in the normal operation mode







RELAY SETTINGS

When the relay contacts are closed, the warning segments (R1 and R2) of that relay are lit on the display.



The relays are active in '-' direction just like they are in '+' positive one. For example; if the contacts of relay 1 is set to be closed circuit for the set value of 1000 and above, relay contacts will also be closed for the values -1000 and below.

Opens the menus related to relay 1



Opens the menus related to relay 2








RELAY 1 SETTINGS

RELAY 1 SET VALUE SETTING





- (2) Press the key to confirm the menu
- (3) The first option is the 'relay 1 set value' menu.



- (4) Press the **ENTER** key to confirm the menu
- (5) The last recorded set value will be displayed on the screen and the ten thousands digit blinks at the same time



- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with key.
- (7) Press the key to save relay 1 set value.
- (8) Press the key to go back to the measurement screen.



RELAY 1 SET DIRECTION SETTING

(1) Press key until you reach the 'Relay 1' menu



- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Relay 1 set direction' menu



- (4) Press the key to confirm the menu
- (5) The last recorded relay direction will be displayed on the screen



(6) Set relay 1 set direction as you desire with menu key.



then relay contacts are closed circuit when the value is below the set value



then relay contacts are open circuit when the value

is above the set value


- (7) Press the key to save relay 1 set direction.
- (8) Press the key to go back to the measurement screen.

ESİT



RELAY 1 SET HYSTERESIS SETTING

Hysteresis can be expressed as the difference between the opening and closing values of the relay or the amount return loss.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Relay 1 hysteresis' menu



- (4) Press the key to confirm the menu
- (5) The last recorded relay 1 hysteresis value will be displayed on the screen and the hundreds digit blinks at the same time




- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with key.
- (7) Press the key to save relay 1 hysteresis value.
- (8) Press the key to go back to the measurement screen.

NOTE: Hysteresis quantity can be between 0 and 255.



RELAY 1 DELAY TIME SETTING

A delay of up to 5 seconds can be given to set the relay. This delay period is made with the 'delay time' menu at intervals of 0.2 seconds between 0 to 1 second and intervals of 1 second between 1 to 5 seconds.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Relay 1 delay time' setting menu



- (4) Press the NIER key to confirm the menu
- (5) The recorded delay time is displayed on the screen. Set the delay time as you desire with menu key.



then 0 second delay (without delay)




then 5 seconds delay

- (6) Press the key to save the relay 1 delay time.
- (7) Press the key to go back to the measurement screen.



RELAY 2 SETTINGS





- (2) Press the key to confirm the menu
- (3) The necessary settings for 'Relay 2' are made by following the settings for 'Relay 1' (see pages 25-28).

ESİT



ANALOG OUTPUT (DAC) SETTINGS


ANALOG OUTPUT CALIBRATION

In order for the weight information on the SMART-2 display to be used in voltage or current controlled automation devices, the analogue output must have been calibrated correctly.

Calibration must be performed after selecting the voltage (0-5V) or current (4-20mA) mode. See the "CONNECTIONS AND MODE SELECTIONS" section of your manual for the selection of the analog output mode.

LVAL refers to DAC LOWEST OUTPUT VALUE HVAL refers to DAC HIGHEST OUTPUT VALUE DMAX refers to DAC MAXIMUM OUTPUT VALUE and

Analog output value = LVAL +
$$\frac{(|HVAL - LVAL| \times Display \ Value)}{DMAX}$$
 For $HVAL > LVAL$ Analog output value = LVAL - $\frac{(|HVAL - LVAL| \times Display \ Value)}{DMAX}$ For $LVAL > HVAL$

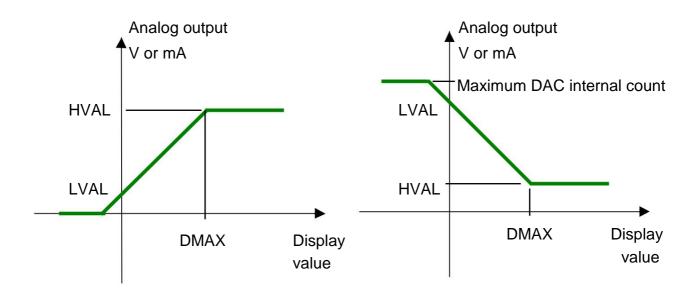

If set as HVAL > LVAL

If set as LVAL > HVAL

NOTE: The maximum DAC internal count value can be 4095.





DAC LOWEST OUTPUT VALUE (LVAL) SETTING

It is used to determine the value to be obtained from the analogue output for the zero value on the screen.

(1) Press key until you reach the 'DAC' menu



- (2) Press the key to confirm the menu
- (3) The first option is the 'DAC lowest output (LVAL) value' menu.



- (4) Press the key to confirm the menu
- (5) The last recorded DAC lowest output (LVAL) value will be displayed on the screen and the thousands digit blinks at the same time



NOTE: WHILE CHANGING THE LVAL VALUE, THE ANALOGUE OUTPUT VALUE FOR

FOR THAT VALUE CAN BE OBSERVED.


- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with key.
- (7) Press the key to save DAC lowest output (LVAL) value.
- (8) Press the key to go back to the measurement screen.

ESİT



DAC HIGHEST OUTPUT VALUE (HVAL) SETTING

It is used to determine the value to be obtained from the analogue output for the DAC maximum value (dmax) to be determined on the screen.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'DAC highest output (HVAL) value' menu "HVAL" appears on the display.



- (4) Press the key to confirm the menu
- (5) The last recorded DAC highest output (HVAL) value will be displayed on the screen and the thousands digit blinks at the same time



NOTE: WHILE CHANGING THE HVAL VALUE, THE ANALOGUE OUTPUT VALUE FOR


FOR THAT VALUE CAN BE OBSERVED.

- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with key.
- (7) Press key to save DAC highest output (HVAL) value
- (8) Press the key to go back to the measurement screen.



DAC MAXIMUM OUTPUT (DMAX) VALUE SETTING

This value is used to set the display value corresponding to the HVAL value.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'DAC maximum output (DMAX) value' menu "dMAX" appears on the display.



- (4) Press the key to confirm the menu
- (5) The last recorded DAC maximum output (DMAX) value will be displayed on the screen and the ten thousands digit blinks at the same time




- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with key.
- (7) Press the key to save DAC maximum output (DMAX) value.
- (8) Press the key to go back to the measurement screen.

ESIT



COMMUNICATION SETTINGS

COMMUNICATION MODE SETTING





- (2) Press the key to confirm the menu
- (3) The first option is the 'Communication mode' menu.



- (4) Press the key to confirm the menu
- (5) Set the communication mode of your choice with menu key.



NO COMMUNICATION



SENDING 4 DIGIT WEIGHT INFORMATION CONTINUOUSLY



ADDRESSABLE COMMUNICATION

- (6) Press the key to save the communication mode
- (7) Press the key to go back to the measurement screen.



MOD2 communication note:

In this mode, the indicator sends the weight information after receiving the authorization signal from its counterpart. Thus, more than one device can be connected to the same communication line. The communication in this mode is the same as the communication form in MOD1.

If more than one indicator is to be communicated with the computer, the communication mode must be set to MOD2 and the hardware setting must done as RS485.

INDICATOR ADDRESS (SCALE IDENTITY NO) SETTING

IT IS ACTIVE AND THE MENU IS AVAILABLE ONLY IF MODE 2 COMMUNICATION IS SELECTED

(1) Press key until you reach the 'Communication' menu



- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Indicator address' menu



- (4) Press the key to confirm the menu
- (5) The last recorded indicator address will be displayed on the screen and the hundreds digit blinks at the same time



065 = hex41 = "A"

NOTE: INDICATOR ADDRESS CAN BE ASSIGNED BETWEEN 0 AND 255

- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with key.
- (7) Press the key to save the indicator address.
- (8) Press the key to go back to the measurement screen.





COMMUNICATION PARITY BIT SETTING

(1) Press key until you reach the 'Communication' menu



- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Communication parity bit' menu



- (4) Press the key to confirm the menu
- (5) Set the communication parity of your choice with menu key.



then no parity bit(NO PARITY)



then parity bit is even (EVEN PARITY)



then parity bit is odd (ODD PARITY)

- (6) Press the key to save the communication parity setting.
- (7) Press the key to go back to the measurement screen.

ESİT



COMMUNICATION SPEED (BAUD RATE) SETTING

The number of data bits that can be sent in one second during communication is called the 'communication speed' (BAUD RATE). For Smart-2 indicators this speed can be set between 1200 and 28800.

(1) Press key until you reach the 'Communication' menu



- (2) Press the ENTER key to confirm the menu
- (3) Press key until you reach the 'Communication speed' menu



- (4) Press the key to confirm the menu
- (5) Set the communication speed of your choice with menu key.



then 1200 baud communication



then 2400 baud communication



then 4800 baud communication



then 9600 baud communication



then 14400 baud communication



then 19200 baud communication



then 28800 baud communication

- (6) Press the key to save the communication speed setting.
- (7) Press the key to go back to the measurement screen.





COMMUNICATION DATA LENGTH SETTING

The length of the data bits to be used for communication is set by this menu. With this parameter setting, 128 different characters can be defined in 7 bit communication. 256 different character definition is possible only if 8 bits = 1 byte communication is selected.

- (1) Press key until you reach the 'Communication' menu
- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Communication data length' menu



- (4) Press the key to confirm the menu
- (5) Set the data length as you desire with menu key.



then 7 bit communication



then 8 bit communication

- (6) Press the key to save the communication data length setting.
- (7) Press the key to go back to the measurement screen.

NOTE: For example, the ASCII code equivalent of the character 'A' is 41 in the hexadecimal (hex) system; By setting the data length, transfer is performed as follows:

<u>7.</u> <u>6.</u> <u>5.</u> <u>4.</u> <u>3.</u> <u>2.</u> <u>1.</u> <u>0.</u>

7 bit x 1 0 0 0 0 0 1

8 bit 0 1 0 0 0 0 0 1





POINT-TO-POINT COMMUNICATION SETTING

Point transmission in communication occurs when 8 bit communication is selected. The point is transmitted by setting the most meaningful bit of the digit sent as 1.

(1) Press key until you reach the 'Communication' menu



- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Point transmission communication' menu



- (4) Press the key to confirm the menu
- (5) Set the point transmission as you desire with menu key.



NON-POINT-TO-POINT COMMUNICATION



POINT-TO-POINT COMMUNICATION

- (6) Press the key to save the point transmission setting in communication
- (7) Press the key to go back to the measurement screen.

ESİT



A sample data stream (mode1, 8 bit and point-to-point communication)

<u>Display</u> +1234	<u>'+'</u> Hex 2B	<u>.'1' <u>'2'</u> <u>'3'</u> <u>'4</u> 31 32 33 3</u>	
+123.4	<u>'+'</u> Hex 2B	' <u>1' '2' '3.' '4</u> 31 32 B3 3	
-12.34	<u>'-'</u> Hex 2D	<u>'1' '2.' '3' '4</u> 31 B2 33 3	

If there is a point in the display value, hex80 is added to the ASCII value of that digit and sent to the opposite side. Character HEX Character HEX 0. B0 (30+80)5. B5 (35+80)1. B1 (31+80)6. B6 (36+80)7. 2. B2 (32+80)**B7** (37+80)3. B3 8. (33+80)B8 (38+80)4. B4 (34+80)9. **B9** (39+80)

An exemplary mode2 data stream (addressed communication):

If the indicator address is set to 65 (hex41), the indicator transfers the weight information after receiving the following data from the opposite side.

If the address of the indicator is set to **0**, the weight information transmission starts with any character received from the serial communication line. It should be noted that the indicator address can be between 0 and 255.

If more than one SMART-2 indicators are connected to the same communication line, RS485 type communication must be set and a different address must be assigned to each device.






BLUETOOTH SETTINGS

BLUETOOTH STATUS SETTING

With this menu you can turn the device's Bluetooth feature on or off. The bluetooth module must be plugged in to the device in order to be active.

The communication distance is 20 meters.





- (2) Press the key to confirm the menu
- (3) The first option is the "BLE Status" menu



- (4) Press the key to confirm the menu
- (5) Press key until reaching 'ON' for activating and 'OFF' for deactivating the BLEWhen 'ON' is selected, the display will show "Wait" message for 1-2 sec.




- (6) Press the key to save the BLE status setting.
- (7) Press the key to go back to the measurement screen.

ESİT



BLUETOOTH ID SETTING

With this menu, you can change the Bluetooth ID of the device. BLE IDs of two devices in the same environment cannot be the same. BLE ID must be one of ASCII equivalents of 0-9, a-z, A-Z characters.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Change BLE ID' menu



- (4) Press the key to confirm the menu
- (5) The last recorded BLE ID will be displayed on the screen and the hundreds digit blinks at the same time



NOTE: BLE ID can be assigned between 0 and 255 and can be selected only between 0-9, a-z and A-Z character range

- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with key.
- (7) Press the key to save the BLE ID. "wait" appears on the display.
- (8) Press the key to go back to the measurement screen.

NOTE: See page 55 for Bluetooth connectivity from the Android application.


ESIT



WIFI SETTINGS

WIFI STATUS SETTING

With this menu you can turn the device WiFi feature on or off. The wifi module must be plugged in to the device in order to be active. The communication distance is 40 meters.





- (2) Press the key to confirm the menu
- (3) The first option is the 'WIFI Status' menu.



- (4) Press the **ENTER** key to confirm the menu
- (5) Press key until reaching 'ON' for activating and 'OFF' for deactivating the WIFI. When 'ON' is selected, the display will show "Wait" message for 1-2 sec.






- (6) Press the key to save the WIFI status setting.
- (7) Press the key to go back to the measurement screen.

ESİT



WIFI MODE SETTING

With this menu, you can change WiFi mode of the device as Access Point or Station. One of the devices in the same environment must be in the Access Point, and the others must be in Station mode. Since the station devices will be connected to the access point device, first the settings of the access point device must be made and WiFi feature must be turned on.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'WIFI mode' menu



- (4) Press the key to confirm the menu
- (5) Press key until 'AP' is displayed for the Access Point mode and 'STA' for the Station mode. The "wait" appears on the display when either mode is selected.



- (6) Press the key to save the WIFI mode setting.
- (7) Press the key to go back to the measurement screen.


ESİT



WIFI Access Point ID SETTING

This menu is active only when device mode is AP.

With this menu, you can change the WIFI Access Point ID of the device. WIFI AP ID must be one of ASCII equivalents of 0-9, a-z, A-Z characters.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Change WIFI AP ID' menu



- (4) Press the key to confirm the menu
- (5) The last recorded WIFI AP ID will be displayed on the screen and the hundreds digit blinks at the same time



NOTE: WIFI AP ID can be assigned between 0 and 255 and can be selected only between 0-9, a-z and A-Z character range

- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with
- (7) Press the key to save the WIFI AP ID.
- (8) Press the key to go back to the measurement screen.


ESIT



WIFI Station ID SETTING

This menu is active only when device mode is STA.

With this menu, you can change the WIFI Station ID of the device. This ID must match with the APID of the WiFi device in AP mode in the same environment. WIFI STA ID must be one of ASCII equivalents of 0-9, a-z, A-Z characters.





- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Change WIFI STA ID' menu



- (4) Press the key to confirm the menu
- (5) The last recorded WIFI STA ID will be displayed on the screen and the hundreds digit blinks at the same time



NOTE: WIFI STA ID can be assigned between 0 and 255 and can be selected only between 0-9, a-z and A-Z character range


- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with
- (7) Press the key to save the WIFI STA ID.
- (8) Press the key to go back to the measurement screen.

ESIT



WIFI Name SETTING

With this menu you can change WiFi Name of the device. Each device on the same network should be given a different name since the WiFi name will appear as a device name in the application. WIFI Name must be one of ASCII equivalents of 0-9, a-z, A-Z characters.






- (2) Press the key to confirm the menu
- (3) Press key until you reach the 'Change WIFI Name' menu



- (4) Press the key to confirm the menu
- (5) The last recorded WIFI Name will be displayed on the screen and the hundreds digit blinks at the same time



NOTE: WIFI Name can be assigned between 0 and 255 and can be selected only between 0-9, a-z and A-Z character range

- (6) Numeric value of the blinking digit can be increased with key. The place value can be changes with
- (7) Press the key to save the WiFi name.
- (8) Press the key to go back to the measurement screen.

NOTE: See page 53 for Wi-Fi connection from the Android app. See page 59 to connect the devices to your own Wifi network.

ESİT



TEMPERATURE CALIBRATION SETTINGS

With this menu you can change temperature calibration of the device. The device has 5-point temperature compensation feature. **When calibrating the temperature, the load cell must be empty.**

There are five ranges in temperature compensation: (, -5 °C) , (-5 °C, 10 °C), (10 °C, 30 °C), (30 °C, 50 °C), (50 °C,). The ranges that cannot be set with this menu are ignored during compensation. So if 3 values are set, 3 point temperature compensation is done. This compensation works partial linearly.

WARNING: In order for these menu functions to be active, the P2 connection inside the indicator must be open circuit; otherwise an error code special for this situation is displayed on the indicator's screen. **IT IS RECOMMENDED NOT TO USE THESE SETTINGS IF YOU DO NOT HAVE SUITABLE DEVICES**

(1) Press key until you reach the 'Temperature Calibration Settings' menu



- (2) Press the key to confirm the menu
- (3) The display shows the current temperature value and the number of range covering the temperature for 2 seconds



(4) Real time internal ADC count value deviation will appear on the display.



- (6) Press the key to save the temperature calibration setting.
- (7) "TCLok" will appear showing that the calibration is successful.




(8) Press the key to go back to the measurement screen.

ESİT



RESTORING FACTORY SETTINGS

With this menu, you can restore the device to factory settings. The values that require the calibration jumper to be installed will not be changed.





- (2) Press the key to confirm the menu
- (3) Press the key until 'Yes' appears in order to to restore the factory settings



(4) Press key to restore factory settings





PERFORMING TARING WITH TARE key

When inactivity is ensured manual taring is performed by

pressing key. When taring is completed, the display is reset and net warning segment is lit. Upon loading, tare becomes visible.



In order to cancel the tare, the inactivity must be provided and

the **ENTER** button must be pressed. The net warning segment goes out when tare is cancelled.



ZEROING DISPLAY VALUE WITH ZERO key

When the inactivity is ensured and if the weight value on the screen is less than MAX / 10, the weight value can be

zeroed with the key




The display is zero when key is pressed and actual zero symbol is displayed on the screen.







CONNECTIONS AND MODE SELECTIONS

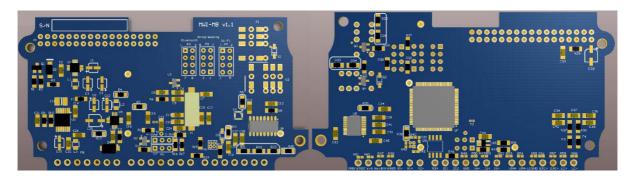

CALIBRATION SWITCH (P2)

The calibration switch P2 must be switched on to change and calibrate the display settings of the device.

The display settings can be accessed and saved values can be displayed while P2 is shorted but the changes made cannot be saved and the error code 'Err50' is displayed on the screen.

The calibration menu cannot be accessed while P2 is closed circuit and the error code 'Err50' is displayed on the screen





ANALOG OUTPUT mode selection

0-5V analog output connection

In the printed circuit of the indicator, the connections are as follows provided that the leftmost terminal slot is number 1.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
-LC 1 input	+LC 1 input	-LCFeed	+LCFeed	LCGround	0V GND	+V (6-24V)	ol-	ol+	0/1+	GND	DI2	DI1	RL 2/1	RL 2/1	RL 1/1	RL 1/2	RS485VCC	Rx / B	Tx / A	RS485GND
								٧		لر										

4-20mA analog output connection

In the printed circuit of the indicator, the connections are as follows provided that the leftmost terminal slot is number 1.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21
1 J	- <u>-</u> -	-LCFeed	+LCFeed	LCGround	0V GND	+V (6-24V)	oj-	oj+	0/1+	GNĐ	DI2	DI1	RL 2/1	RL 2/2	RL 1/1	RL 1/2	RS485VCC	Rx/B	Tx / A	RS485GND

WARNING: Changes to the card (short-circuit, open circuit and interfering with components) other than those listed above may cause permanent damage to the indicator and incorrect operation of the device and are not covered by the warranty.

ESİT




ANDROID APPLICATION SETTINGS

Settings that can be made via Smart can also be done via the android application. Device settings can be made via following application is wireless connection Bluetooth/WiFi is used.


CONNECTION WITH WIFI MODULE

First, open the Smart's WiFi by following the "WIFI STATUS SETTING" section. Make sure that "WIFI MODE SETTING" is "AP" (see "WIFI TYPE SETTING" section for this).

Scan your WIFI networks from your Android phone and connect to the "loadcellx" network by typing "Esit.smart2" to password field.

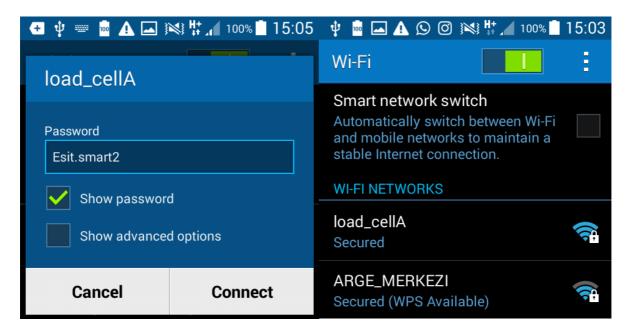

Once connected, open the "Smart2" android application and click the "WIFI" button.

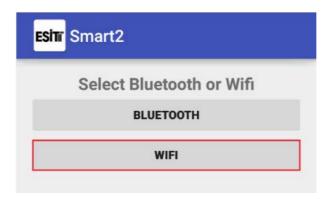

"ALERT You are already connected to loadcellA. Do you want to use that loadcell", "No", "Yes" appears on the screen. Please perform operation step 4 when proceeded with "Yes" and step 1 when proceeded with "No"





1-Click on the "+" shown in the figure



2-The location service must be turned on after proceed with "Yes" to message displayed.

ALERT

Location Service is disabled. You need to open it.

NO YES

3-Select the smart you want to connect to in the opened page.



4-You can see the instant weight information on the smart screen by clicking on the "GET" button on the pop-up screen. By clicking on the "SETTINGS" button, you can make the settings you need.







CONNECTION WITH BLUETOOTH MODULE


(1) After turning on your Android device's Bluetooth, open the Smart2 application and click the BLUETOOTH button.



(2) Click on the "Connect" button.




(3) Select the Smart you want to communicate with.

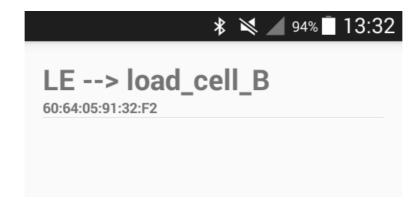






(4) The weight value can be obtained when the "GET" button is clicked on the pop-up screen. When the "Ref" button is clicked, the weight value is automatically updated.

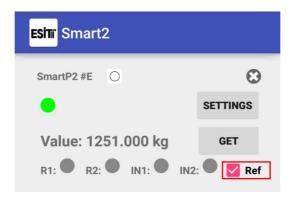

(5) More than one smarts can communicate simultaneously via Bluetooth. Click the "+" button for this. It must be noted that "BLUETOOTH IDs" of the Smart devices are different. BLUETOOTH IDs can be set from "Change BLE ID" menu.

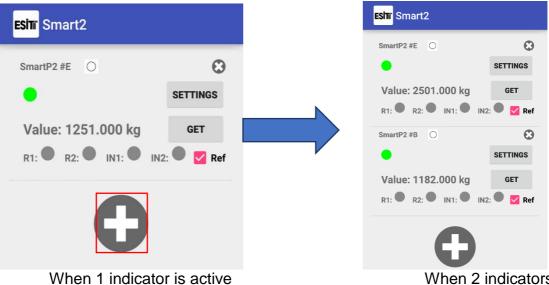


are active

When 2 indicators





(6) By clicking "SETTINGS" button, desired changes can be made.

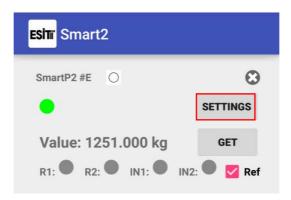


MAKING DEVICE SETTINGS

Display Settings

"Decimal Point", "Step", "Capacity" and "Unit" settings can be changed as desired.

After changing, press "SAVE" button at the end of the page.

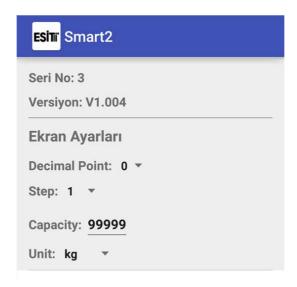






Configuration Settings

Make the desired configuration settings and press "SAVE" button.

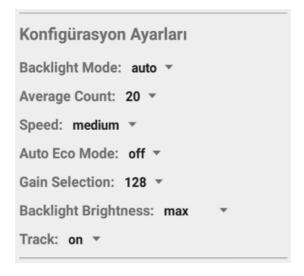

Relay Settings

Make the desired relay settings and press "SAVE" button.



Analog Output (DAC) Settings

Make the desired analog output settings and press "SAVE" button.








Communication Settings

Make the desired communication settings and press "SAVE" button.

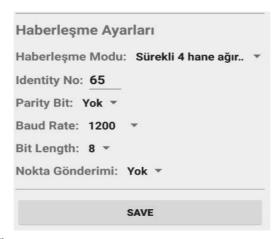

Wifi Connection Setting

If Wifi connection modules are used and it is intended to read weight data from many smart devices through a local network, the following procedure should be followed for each smart device.

NOTE: This setting only applies to smart devices with the WIFI module installed. Not suitable for use with BLUETOOTH devices.

(This setting is made if it is intended to connect to a local network and receive data simultaneously from many smart devices.)

- (1) First make sure that the "wifi mode setting" of the smart is AP.
- (2) Click the "WIFI" button in the WiFi settings section of the Android application.




(3) rite the "SSID" and "Pass" in the figure to SSID and password fields of the network from which you would like to get weight data and click "SAVE" button.

ESİT






- (4) Change Smart "wifi mode setting" as "STA".
- **(5)** When the "WAIT" message disappears from the Smart screen, connection to the local network is done.
- **(6)** If you cannot connect to the local network, an error ERR.09 will be displayed on the smart screen. In this case check the necessary connections and repeat the procedure.
- (7) When the Smart is taken to "STA" mode, the "IP" submenu will appear under the WIFI menu. You can check your smart's IP address from this section.
- (8) The desktop application "Smart2 reader" can be used to access the weight information sent by the Smarts connected to the local network.
- **(9)** After opening the application, the IP address of the Smart that is intended to get data from must be written to the text box under the indicators.

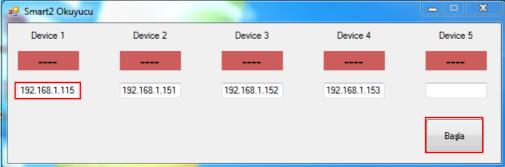

(10) Then click the "Start" button to see the weights of the respective Smart or Smart devices.

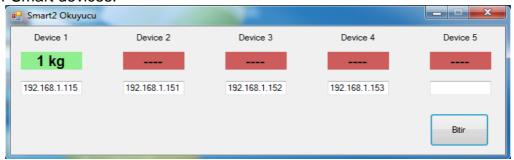

(11) The source code for the desktop program is available on the CD included in the product package. For further information, please contact us.






Calibration Setting

It is possible to perform calibration through both Smart and application.

(1) Press the "CALIBRATION" button




(2) If there is no load on the system, press "GET" button.

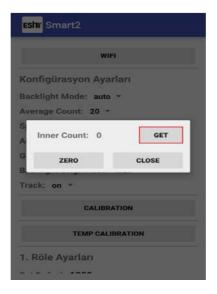


ESİT




(3) Press the "ZERO" button

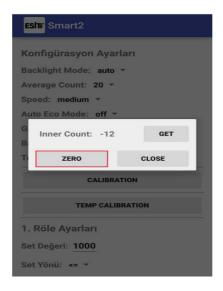

(4) Place the weight you want to calibrate in the system and press "Get" button. Repeat the process several times and press the "LOAD" button after seeing that the value is stable.

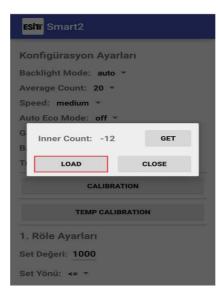

(5) Enter the weight value you want to calibrate in the system to the "Load Value" section and press "Get" button.

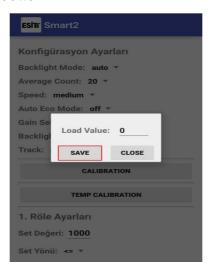





Temp Calibration Setting

Settings made via Smart are visible.

(1) Press the "CALIBRATION" button



(2) Press the "GET" button



(3) Press the "SAVE" button







ERROR CODES

The following error codes can be displayed on SMART-2 indicators during measurement and as a result of incorrect setting. These error codes and their causes are listed below

These	errors indicate that the device needs to be reset or repaired
Error99	No response from ADC
Error98,97	ADC serial communication is incorrect
Error96	Bluetooth reset error
Error95	Bluetooth sleep mode error
Error94	Bluetooth name change error
Error93	Wifi APID change error
Error92	EEPROM Writing error
Error91	EEPROM full error
The	se Errors Can Be Fixed After The Operation Is Repeated
Error1	Weight data is above maximum value
Error2	The weight data is below the minimum value
Error3	The weight data is too large to be reset
Error4	ESC key is stuck
Error4	Menu key is stuck
Error6	Enter key is stuck
Error7	Wifi / BLE name entered incorrectly
Error8	Changing name when wifi is connected
Error9	Wifi name change error
Error10	EEPROM consumed 5% of its life
Error19	Calibration value cannot be 0
Error50	Calibration jumper inserted
0Error51	mV and V values cannot be calibrated
Error52	mV and V values cannot be reset
Error60	IP address error. The device is in STA mode but is not connected to any network.





	216) 585 1818 F (2	